

GEN 2.4 INDICATEURS D'EMPLACEMENTS

LOCATION INDICATORS

INDICATEURS D'EMPLACEMENT / CODAGE

LOCATION INDICATORS / CODING

EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR
AFAREAITU CHT	NTHE	TATAKOTO	NTGO		
AHE	NTHE	TETIAROA	NTTE		
ANAA	NTGA	TIKEHAU	NTGC		
APATAKI	NTGD	TOTELEGIE	NTGJ		
ARATIKA NORD	NTKK	TUBUAI-Mataura	NTAT		
← ARUTUA	NTGU	TUPAI	NTTU		
BORA BORA Motu-Mute	NTTB	TUREIA	NTGY		
FAAITE	NTKF	UA HUKA	NTMU		
FAKAHINA	NTKH	UA POU	NTMP		
NUKUTEPIPI	NTKU	VAHITAH	NTUV		
FAKARAVA	NTGF				
FANGATAU	NTGB				
HAO	<u>NTTO</u>				
HIKUERU	NTGH				
HIVA-OA-Atuona	NTMN				
HUAHINE-Fare	NTTH				
KATIU	NTKT				
KAUEHI	NTKA				
KAUKURA	NTGK				
MAKEMO	NTGM				
MANIHI	NTGI				
MATAIVA	NTGV				
MAUPITI	NTTP				
MOOREA-Temae	NTTM				
MURUROA	NTTX				
NAPUKA	NTGN				
NENGO-NENGO	NTGG				
NIAU	NTKN				
NUKU-HIVA	NTMD				
NUKUTAVAKE	NTGW				
NUKUTEPIPI	NTKU				
PIRAE CHPF	<u>NTHP</u>				
PUKA PUKA	NTGP				
PUKARUA	NTGQ				
RAIATEA-Uturoa	NTTR				
RAIVAVAE	NTAV				
RANGIROA	NTTG				
RAROA	NTKO				
REAO	NTGE				
RIMATARA	NTAM				
RURUTU	NTAR				
TAHITI-Faaa	<u>NTAA</u>				
TAKAPOTO	NTGT				
TAKAROA	NTKR				
TAKUME	NTKM				
TARAVAO CHT	<u>NTHV</u>				

Indicateur souligné : aérodrome non relié au RSFTA / Location indicator underlined : aerodrome not connected to the AFTN

INDICATEURS D'EMPLACEMENT / DECODAGE

LOCATION INDICATORS / DECODING

INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION
NTAA	TAHITI-Faaa	NTTE	TETIAROA		
NTAM	RIMATARA	NTTG	RANGIROA		
NTAR	RURUTU	NTTH	HUAHINE-Fare		
NTAT	TUBUAI-Mataura	NTTM	MOOREA-Temae		
NTAV	RAIVAVAE	<u>NTTO</u>	HAO		
NTGA	ANAA	NTTP	MAUPITI		
NTGB	FANGATAU	NTTR	RAIATEA-Uturoa		
NTGC	TIKEHAU	NTTU	TUPAI		
NTGD	APATAKI	NTTX	MURUROA		
NTGE	REAO	NTUV	VAHITAH		
NTGF	FAKARAVA				
NTGG	NENGO-NENGO				
NTGH	HIKUERU				
NTGI	MANIHI				
NTGJ	TOTELEGIE				
NTGK	KAUKURA				
NTGM	MAKEMO				
NTGN	NAPUKA				
NTGO	TATAKOTO				
NTGP	PUKA PUKA				
NTGQ	PUKARUA				
← NTGT	TAKAPOTO				
NTGU	ARUTUA				
NTGV	MATAIVA				
NTGW	NUKUTAVAKE				
NTGY	TUREIA				
NTHE	AHE				
<u>NTHF</u>	AFAREAITU CHT				
<u>NTHP</u>	PIRAE CHPF				
<u>NTHV</u>	TARAVAO CHT				
NTKA	KAUEHI				
NTKF	FAAITE				
NTKH	FAKAHINA				
NTKK	ARATIKA NORD				
NTKM	TAKUME				
NTKN	NIAU				
NTKO	RAROIA				
NTKR	TAKAROA				
NTKT	KATIU				
NTKU	NUKUTEPIPI				
NTKU	NUKUTEPIPI				
NTMD	NUKU-HIVA				
NTMN	HIVA-OA-Atuona				
NTMP	UA POU				
NTMU	UA HUKA				
NTTB	BORA BORA Motu-Mute				

Indicateur souligné : a rodrome non reli  au RSFTA / Location indicator underlined : aerodrome not connected to the AFTN