

GEN 2.4 INDICATEURS D'EMPLACEMENTS

LOCATION INDICATORS

INDICATEURS D'EMPLACEMENT / CODAGE

LOCATION INDICATORS / CODING

EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR
AFAREAITU CHT	<u>NTHE</u>	TETIAROA	<u>NTTE</u>		
AHE	<u>NTHE</u>	TIKEHAU	<u>NTGC</u>		
ANAA	<u>NTGA</u>	TOTELEGIE	<u>NTGJ</u>		
APATAKI	<u>NTGD</u>	TUBUAI-Mataura	<u>NTAT</u>		
ARATIKA NORD	<u>NTKK</u>	TUPAI	<u>NTTU</u>		
ARUTUA	<u>NTGU</u>	TUREIA	<u>NTGY</u>		
BORA BORA Motu-Mute	<u>NTTB</u>	UA HUKA	<u>NTMU</u>		
FAAITE	<u>NTKE</u>	UA POU	<u>NTMP</u>		
FAKAHINA	<u>NTKH</u>	VAHITAH	<u>NTUV</u>		
NUKUTEPIPI	<u>NTKU</u>				
FAKARAVA	<u>NTGF</u>				
FANGATAU	<u>NTGB</u>				
HAO	<u>NTTO</u>				
HIKUERU	<u>NTGH</u>				
HIVA-OA-Atuona	<u>NTMN</u>				
HUAHINE-Fare	<u>NTTH</u>				
KATIU	<u>NTKT</u>				
KAUEHI	<u>NTKA</u>				
KAUKURA	<u>NTGK</u>				
MAKEMO	<u>NTGM</u>				
MANIHI	<u>NTGI</u>				
MATAIVA	<u>NTGV</u>				
MAUPITI	<u>NTTP</u>				
MOOREA-Temae	<u>NTTM</u>				
MURUROA	<u>NTTX</u>				
NAPUKA	<u>NTGN</u>				
NENGO-NENGO	<u>NTGG</u>				
NIAU	<u>NTKN</u>				
NUKU-HIVA	<u>NTMD</u>				
NUKUTAVAKE	<u>NTGW</u>				
NUKUTEPIPI	<u>NTKU</u>				
PIRAE CHPF	<u>NTHP</u>				
PUKA PUKA	<u>NTGP</u>				
PUKARUA	<u>NTGQ</u>				
RAIATEA-Uturoa	<u>NTTR</u>				
RAIVAVAE	<u>NTAV</u>				
RANGIROA	<u>NTTG</u>				
RAROIA	<u>NTKO</u>				
REAO	<u>NTGE</u>				
RIMATARA	<u>NTAM</u>				
RURUTU	<u>NTAR</u>				
TAHITI-Faaa	<u>NTAA</u>				
TAKAPOTO	<u>NTGT</u>				
TAKAROA	<u>NTKR</u>				
TAKUME	<u>NTKM</u>				
TARAVAO CHT	<u>NTHV</u>				
TATAKOTO	<u>NTGO</u>				

Indicateur souligné : aéroport non relié au RSFTA / Location indicator underlined : aerodrome not connected to the AFTN

INDICATEURS D'EMPLACEMENT / DECODAGE

LOCATION INDICATORS / DECODING

INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION	INDICATEUR INDICATOR	EMPLACEMENT LOCATION
NTAA	TAHITI-Faaa	<u>NTTG</u>	RANGIROA		
<u>NTAM</u>	RIMATARA	<u>NTTH</u>	HUAHINE-Fare		
<u>NTAR</u>	RURUTU	<u>NTTM</u>	MOOREA-Temae		
<u>NTAT</u>	TUBUAI-Mataura	<u>NTTO</u>	HAO		
<u>NTAV</u>	RAIVAVAE	<u>NTTP</u>	MAUPITI		
<u>NTGA</u>	ANAA	<u>NTTR</u>	RAIATEA-Uturoa		
<u>NTGB</u>	FANGATAU	<u>NTTU</u>	TUPAI		
<u>NTGC</u>	TIKEHAU	<u>NTTX</u>	MURUROA		
<u>NTGD</u>	APATAKI	<u>NTUV</u>	VAHITAH		
<u>NTGE</u>	REAO				
<u>NTGF</u>	FAKARAVA				
<u>NTGG</u>	NENGO-NENGO				
<u>NTGH</u>	HIKUERU				
<u>NTGI</u>	MANIHI				
<u>NTGJ</u>	TOTELEGIE				
<u>NTGK</u>	KAUKURA				
<u>NTGM</u>	MAKEMO				
<u>NTGN</u>	NAPUKA				
<u>NTGO</u>	TATAKOTO				
<u>NTGP</u>	PUKA PUKA				
<u>NTGQ</u>	PUKARUA				
<u>NTGT</u>	TAKAPOTO				
<u>NTGU</u>	ARUTUA				
<u>NTGV</u>	MATAIVA				
<u>NTGW</u>	NUKUTAVAKE				
<u>NTGY</u>	TUREIA				
<u>NTHE</u>	AHE				
<u>NTHF</u>	AFAREAITU CHT				
<u>NTHP</u>	PIRAE CHPF				
<u>NTHV</u>	TARAVAO CHT				
<u>NTKA</u>	KAUEHI				
<u>NTKE</u>	FAAITE				
<u>NTKH</u>	FAKAHINA				
<u>NTKK</u>	ARATIKA NORD				
<u>NTKM</u>	TAKUME				
<u>NTKN</u>	NIAU				
<u>NTKO</u>	RAROA				
<u>NTKR</u>	TAKAROA				
<u>NTKT</u>	KATIU				
<u>NTKU</u>	NUKUTAPIPI				
<u>NTKU</u>	NUKUTAPIPI				
<u>NTMD</u>	NUKU-HIVA				
<u>NTMN</u>	HIVA-OA-Atuona				
<u>NTMP</u>	UA POU				
<u>NTMU</u>	UA HUKA				
<u>NTTB</u>	BORA BORA Motu-Mute				
<u>NTTE</u>	TETIAROA				

Indicateur souligné : aéroport non relié au RSFTA / Location indicator underlined : aerodrome not connected to the AFTN