

MARSEILLE PROVENCE
Départs RNAV initiaux RWY 13
Initial RNAV departures RWY 13

FREQ : voir/see AD 2 LFML COM 01

RNAV 1
GNSS ou/or DME/DME*
*(IRU requis/required)

VAR 2°E (2020)

ALT 70
TA 5000



AVERTISSEMENT / WARNING
(1) pour les SID effectuant un virage vers NATEG uniquement.
(1) for SID turning to NATEG only.

ALT / HGT : ft
Distances : NM