

APPROCHE AUX INSTRUMENTS

Instrument approach

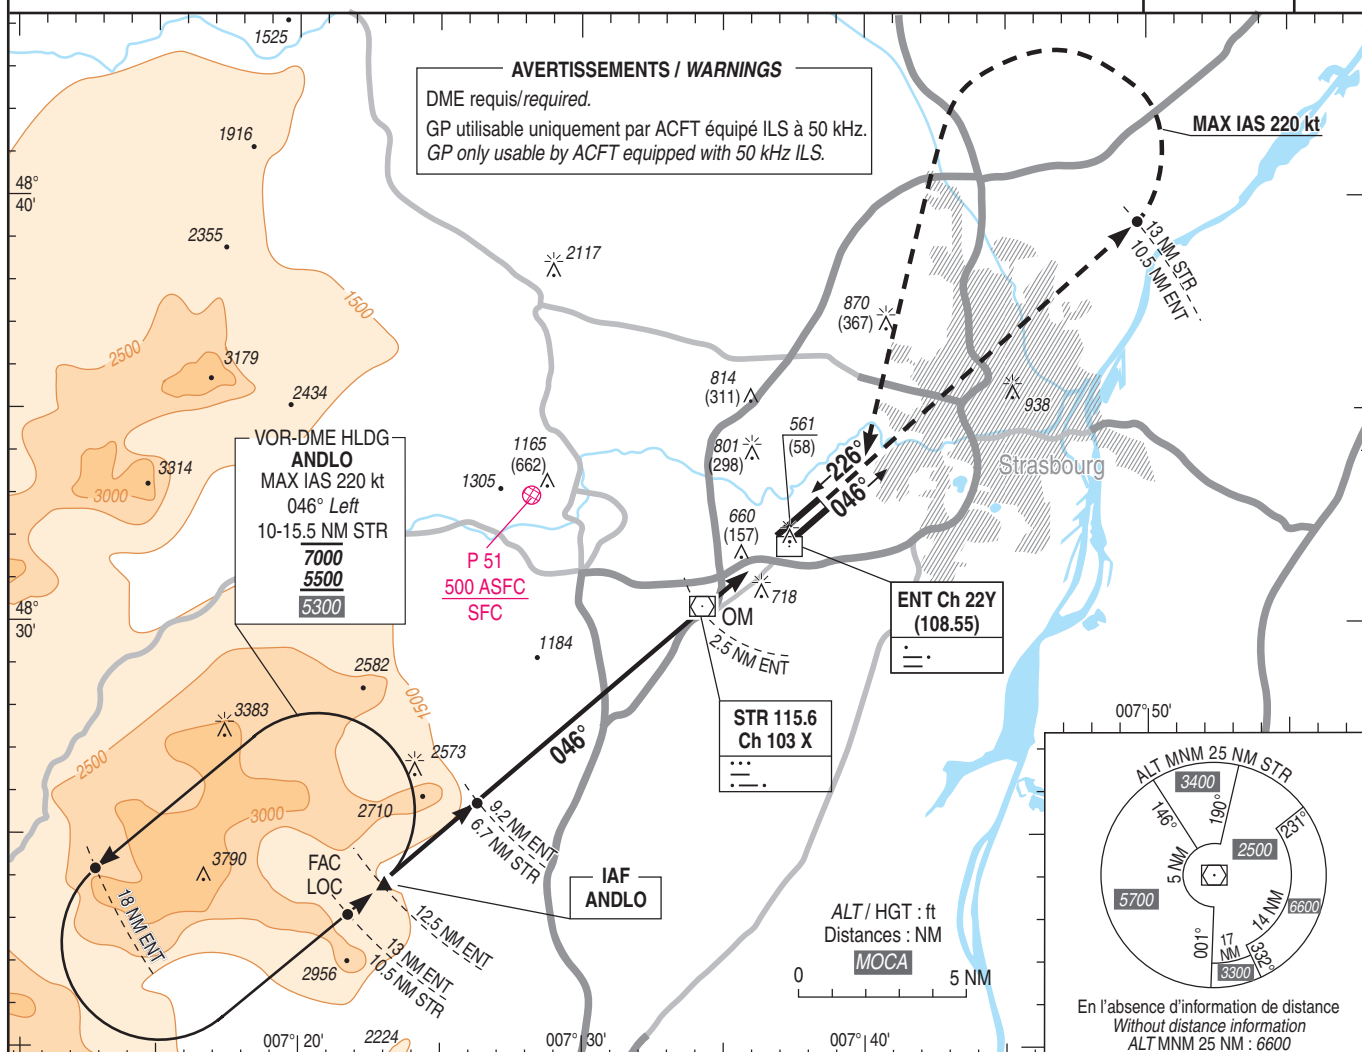
CAT A B C D

ALT AD : 505, THR : 503 (18 hPa)

STRASBOURG ENTZHEIM

ILS ou/or LOC RWY 05

FREQ : voir/see AD 2 LFST COM 01

ILS - DME
ENT 108.55
RDH : 50VAR
3°E
(2020)

TA : 7000									
6000 (5497)	046°		FAF LOC		1420 (917)	OM STR	MAPT LOC		
5500 (4997)	046°				4020 (3517)	046°			
					3800 (3297)	3.5° - 6.1%			
					3040 (2537)				
					1170 (667)	MDA 046°			
						DA			
→ ENT (NM)	14.2	13	9.2	2.5	0.5				
→ STR (NM)	11.7	10.5	6.7	0					
→ THR (NM)		12.9	9.1	2.4	0.4				

API : Monter **dans l'axe RDL 046° STR**. A **10.5 NM ENT / 13 NM STR**, tourner à **gauche** pour intercepter et suivre le **RDL 046° STR** (RM 226°) en montée vers **5500** (4997) puis intégrer l'attente **ANDLO**. Monter à **3400** (2897) avant d'accélérer en palier.

*Missed approach : Climb **straight ahead RDL 046° STR**. At **10.5 NM ENT / 13 NM STR**, turn **left** to intercept and follow **RDL 046° STR** (MAG 226°) climbing to **5500** (4997) and join holding **ANDLO**. Climb to **3400** (2897) prior to level acceleration.*

MNM AD : distances verticales en pieds, RVR et VIS en mètres / vertical distances in feet, RVR and VIS in metres.

REF HGT : ALT THR

Observations / Remarks : NIL
2.5 NM ENT - MAPT 2.0 NM 1 min 43 85 kt 1 min 25 100 kt 1 min 12 115 kt 0 min 55 130 kt 0 min 45 160 kt 0 min 39
2.5 NM ENT - THR 2.4 NM 2 min 03 1 min 42 1 min 26 1 min 15 1 min 06 0 min 54 0 min 47
VSP (ft/min) Non disponible / Not available

