

APPROCHE AUX INSTRUMENTS

KONE

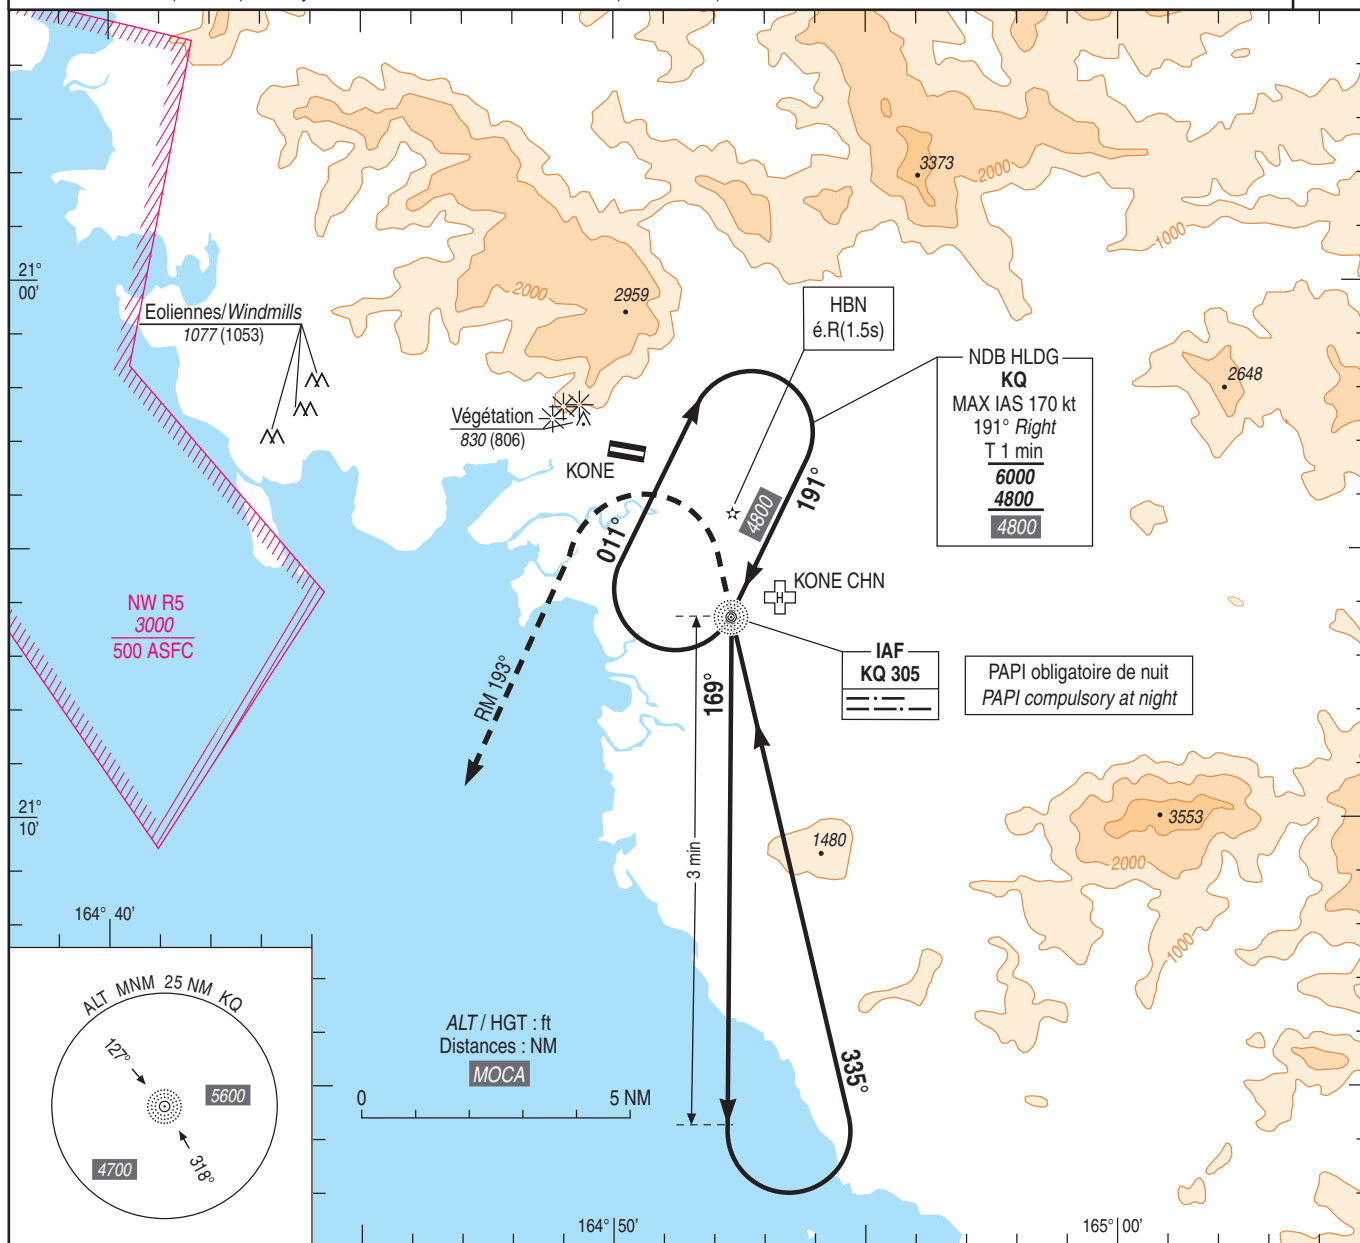
Instrument approach

CAT A B

NDB A

ALT AD : 24 (1 hPa)

APP : NIL
TWR : NIL
AFIS : KONE Information 122.500 (FR)
Absence ATS : **A/A** (122.500) FR seulement. Obtenir le QNH local sur STAP 122.500 (☎ 47 84 33) ou auprès de TONTOUTA Information 128.200
A/A (122.500) FR only. Obtain local QNH from STAP 122.500 (☎ 47 84 33) or TONTOUTA Information 128.200

VAR
12° E
(20)

TA : 11000

API : A KQ, tourner à **gauche RM 193°** en montée vers **3400** (3376).
A 3400 (3376), tourner à **gauche** pour rejoindre KQ en montée vers **4800** (4776).
Ne pas tourner avant le MAPT.
Monter à **2000** (1976) avant d'accélérer en palier.

Missed APCH : At KQ, turn **left MAG 193°** climbing up to **3400** (3376).
At **3400** (3376), turn **left** to join KQ climbing up to **4800** (4776).
Do not turn before MAPT.
Climb up to **2000** (1976) prior to level acceleration.

MNM AD : distances verticales en pieds, VIS en mètres / vertical distances in feet, VIS in metres.

REF HGT : ALT AD

CAT	MVL / Circling (1)		Observations / Remarks : HN : ATT RWY 09 interdit / LDG RWY 09 prohibited. (1) MVL interdites au Nord de la piste. / Circling prohibited North of RWY.
	MDA (H)	VIS	
A	1890 (1860)	1600	
B	1920 (1890)		