

**APPROCHE AUX INSTRUMENTS**

**RANGIROA**


Instrument approach

CAT C


VOR Y RWY 27

ALT AD : 10 (1 hPa), THR : 10

APP : NIL	VAR
TWR : NIL	12° E
AFIS : RANGIROA Information 118.300 (FR). Absence ATS : <b>A/A</b> (FR seulement/only). Obtenir QNH auprès de / Obtain QNH from TAHITI CTL 132.500	(15)

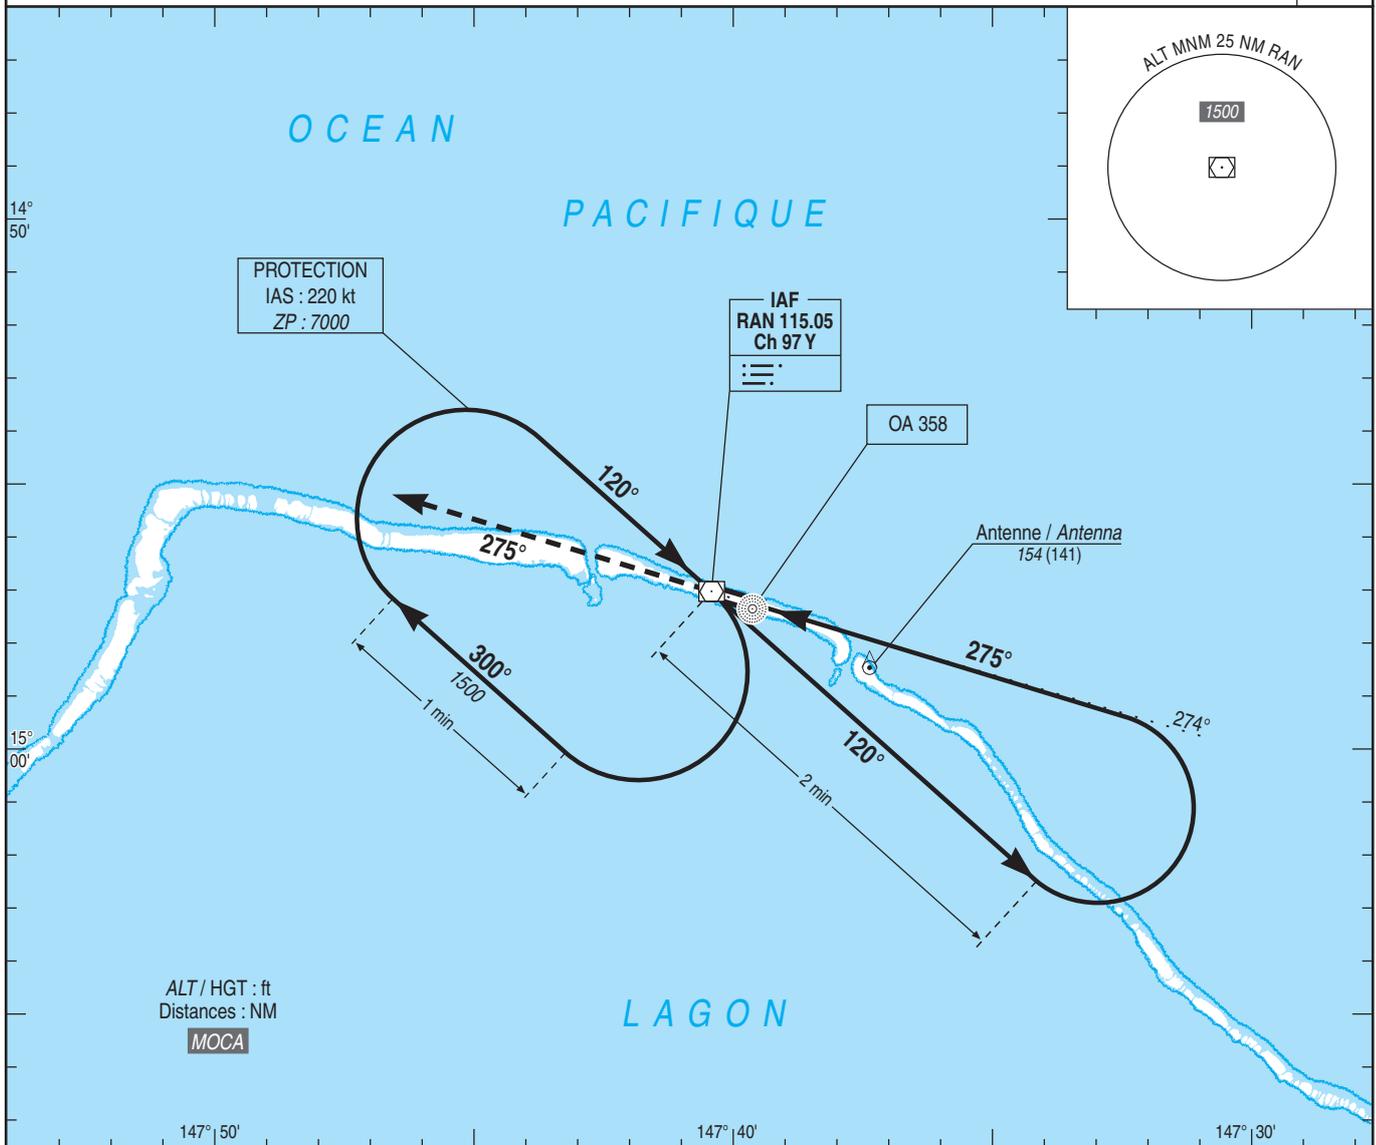

TA : 3000

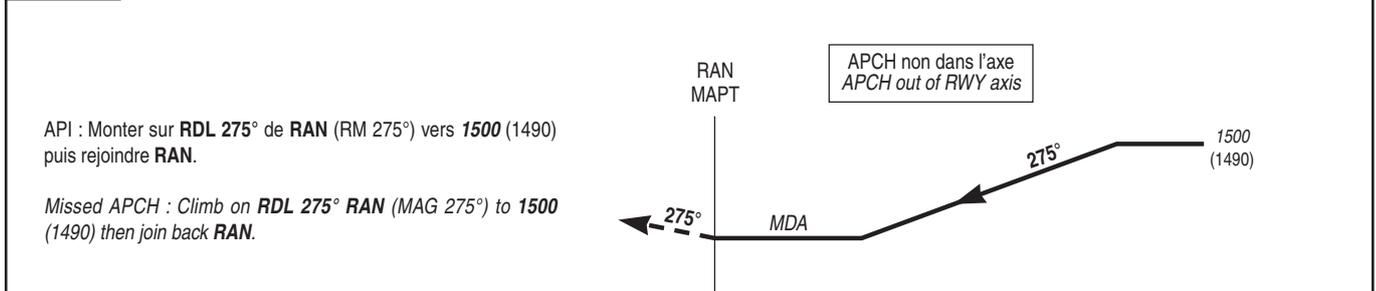

API : Monter sur **RDL 275°** de **RAN** (RM 275°) vers **1500** (1490) puis rejoindre **RAN**.

Missed APCH : Climb on **RDL 275° RAN** (MAG 275°) to **1500** (1490) then join back **RAN**.

← THR (NM) 1

MNM AD : distances verticales en pieds, RVR et VIS en mètres / vertical distances in feet, RVR and VIS in metres. REF HGT : ALT AD

CAT	VOR Y			MVL / Circling		MVL / Circling <sup>(1)</sup> absence ATS	
	MDA (H)	RVR	OCH	MDA (H)	VIS	MDA (H)	VIS
C	610 (600)	2400	440	610 (600)	2400	700 (690)	2400

Observations / Remarks : (1) HJ seulement si PCL hors service. / Daytime only if PCL U/S.

VSP (ft/min) Non disponible / Not available