

**APPROCHE AUX INSTRUMENTS**

**MARE LA ROCHE**

Instrument approach


CAT A B

ALT AD : 138 (6 hPa), THR : 136

NDB RWY 31

APP : TONTOUTA Approche/Approach 125.100 - 128.300 (s)  
TWR : NIL  
AFIS : MARE Information 121.100 (L) (FR)  
Absence ATS : **A/A** (121.100) FR seulement. Obtenir le QNH local sur STAP 121.100 (☎ 45 49 73) ou auprès de TONTOUTA Information 125.100  
**A/A** (121.100) FR only. Obtain local QNH on STAP 121.100 (☎ 45 49 73) or from TONTOUTA Information 125.100


VAR  
12° E  
(2015)

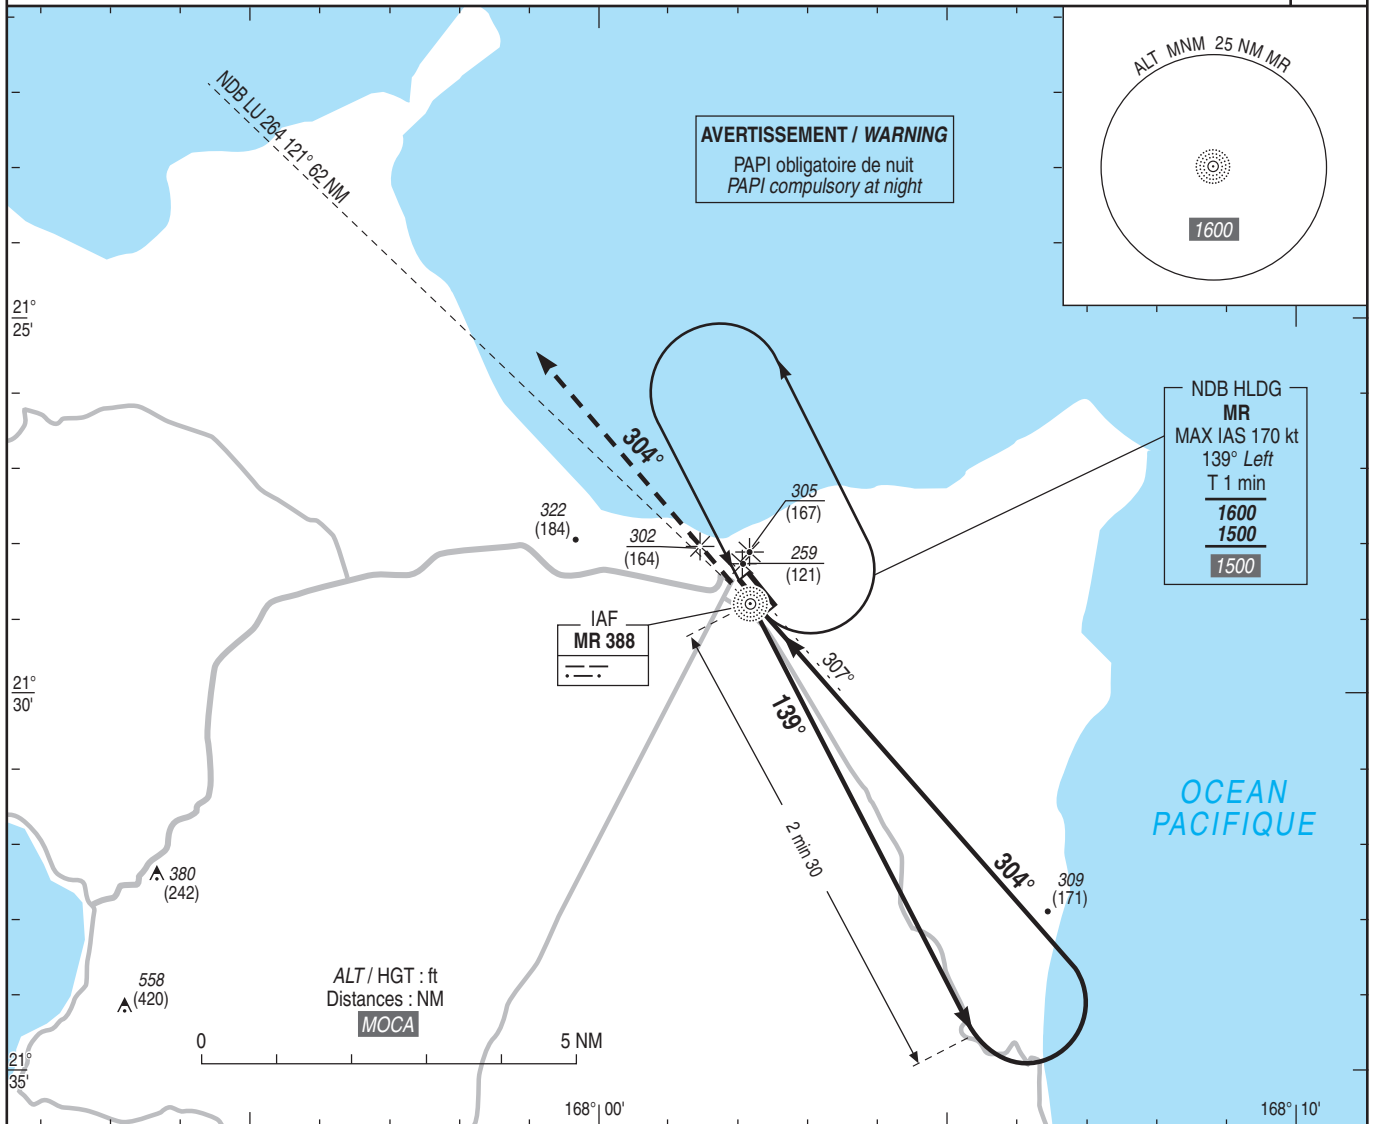

TA : 11000

API : Monter 304° vers 1500 (1362) et monter à l'altitude de sécurité.

Missed APCH: Climb 304° up to 1500 (1362) and climb up to safety altitude

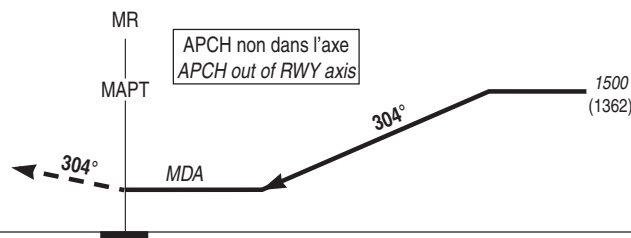

→ THR (NM)

MNM AD : distances verticales en pieds, RVR et VIS en mètres / vertical distances in feet, RVR and VIS in metres.

REF HGT : ALT AD

CAT	NDB			MVL / Circling	
	MDA (H)	RVR	OCH	MDA (H)	VIS
A	670 (520)	1600	518	690 (540)	1500
B					1600