

**APPROCHE AUX INSTRUMENTS**

**MARSEILLE PROVENCE**

Instrument approach


CAT A B C D

ALT AD : 70 (3 hPa), DTHR : 61

VPT RWY 31L

FREQ : voir/see AD 2 LFML COM 01

VAR  
2° E  
(20)

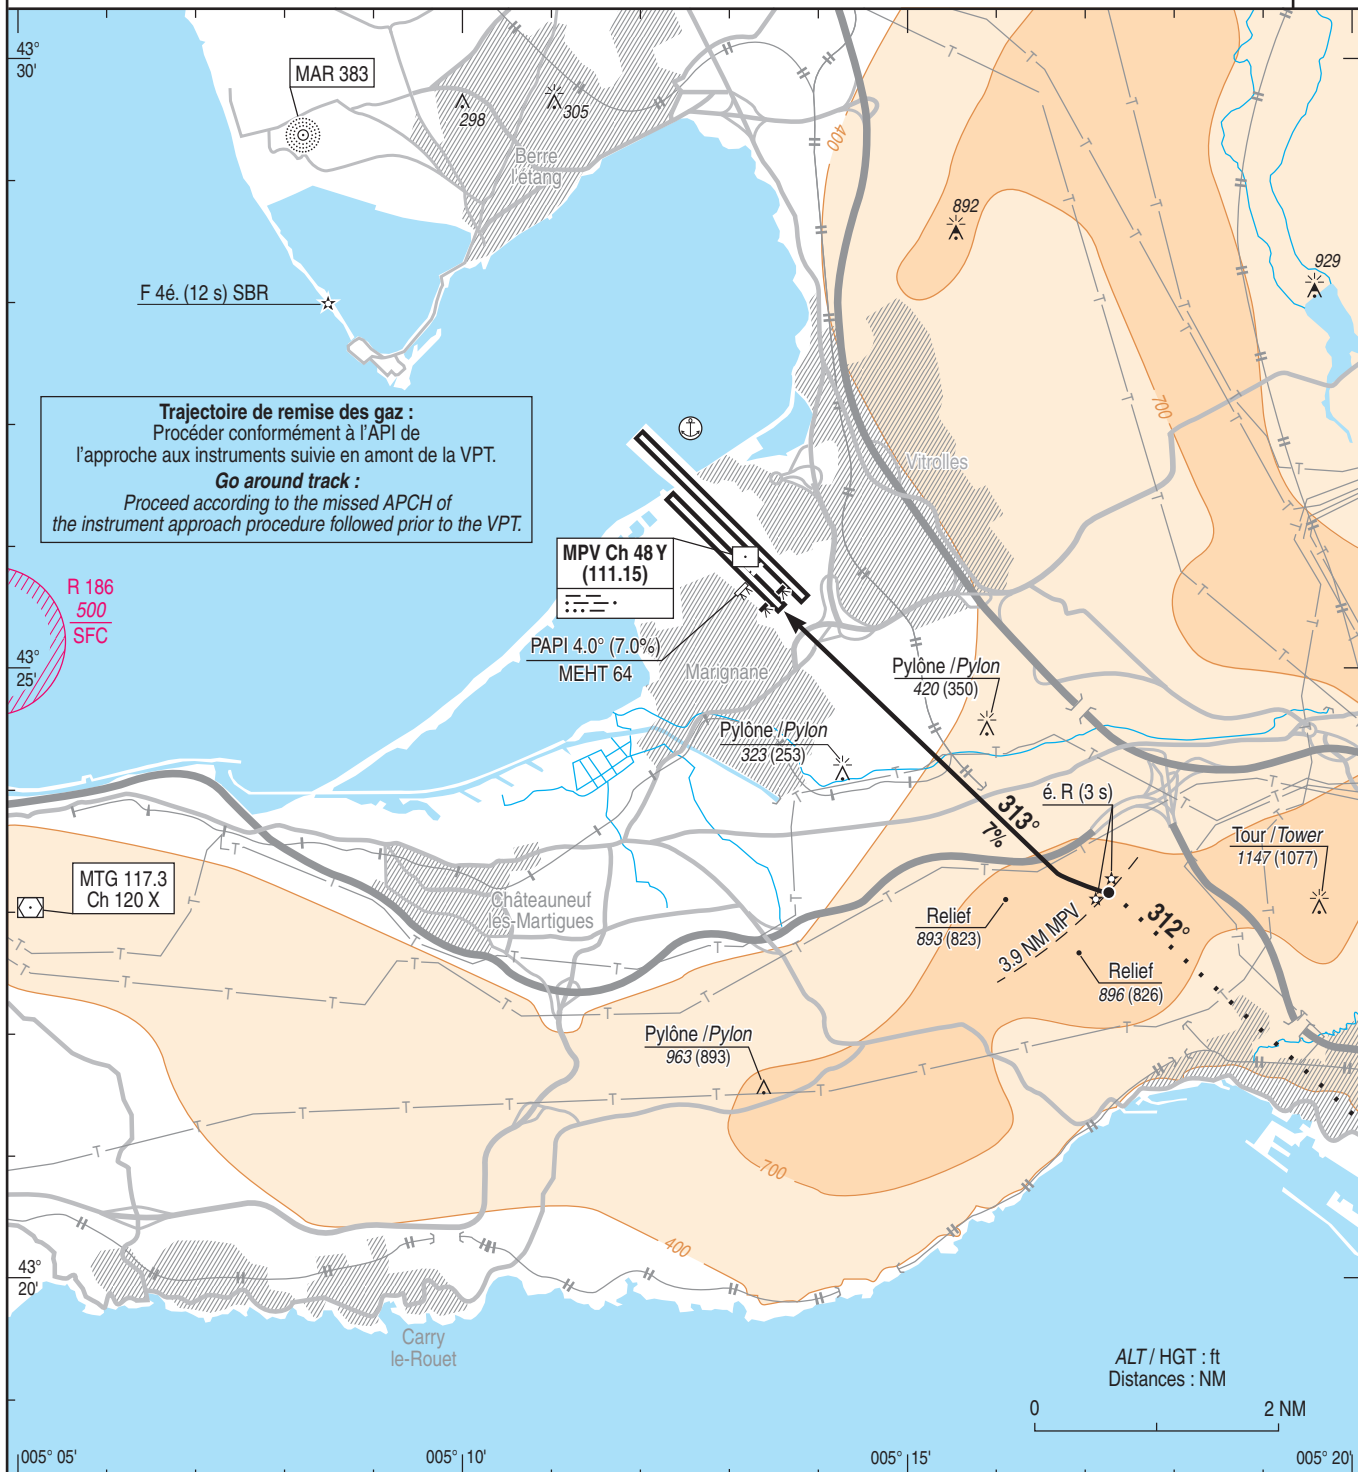

MNM AD : distances verticales en pieds, VIS en mètres / vertical distances in feet, VIS in metres.

REF HGT : ALT AD

CAT	Suite procédure ILS After ILS procedure		Suite procédure LOC/DME After LOC/DME procedure	
	VPT (1)	(1)	VPT (1)	(1)
	MDA (H)	VIS	MDA (H)	VIS
A	1250 (1180)	1500	1250 (1180)	1500
B	1250 (1180)	1600	1250 (1180)	1600
C	1340 (1270)	2400	1340 (1270)	2500
D	1340 (1270)	3600	1340 (1270)	3600

Observations / Remarks : (1) OCH de construction / studied OCH.