

APPROCHE AUX INSTRUMENTS

BEAUVAIS TILLE



Instrument approach

CAT A B C D

VOR X RWY 12

ALT AD : 359 (13 hPa), DTHR : 352

ATIS BEAUVAIS 118.380 APP : BEAUVAIS Approche / Approach 123.985 TWR : BEAUVAIS Tour / Tower 121.400 Absence ATS : AIA FR seulement / only. Obtenir / Obtain QNH PARIS LE BOURGET sur / from ATIS LE BOURGET 120.000	VAR 1° E (20)
---	---------------------

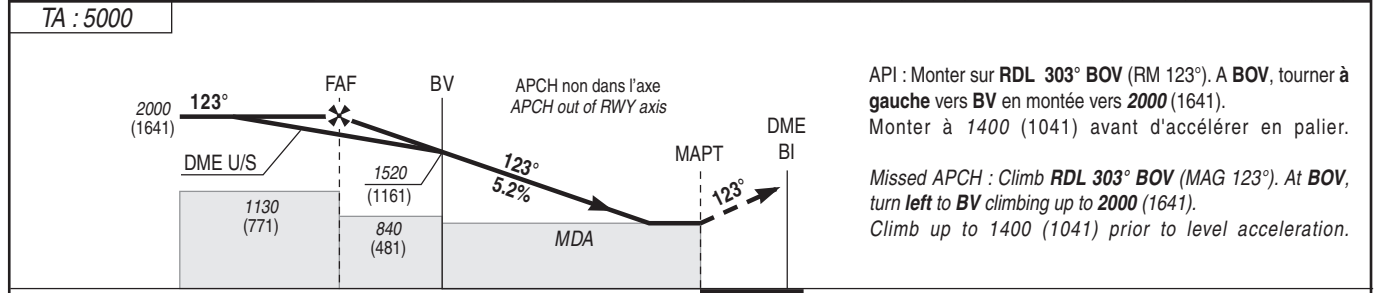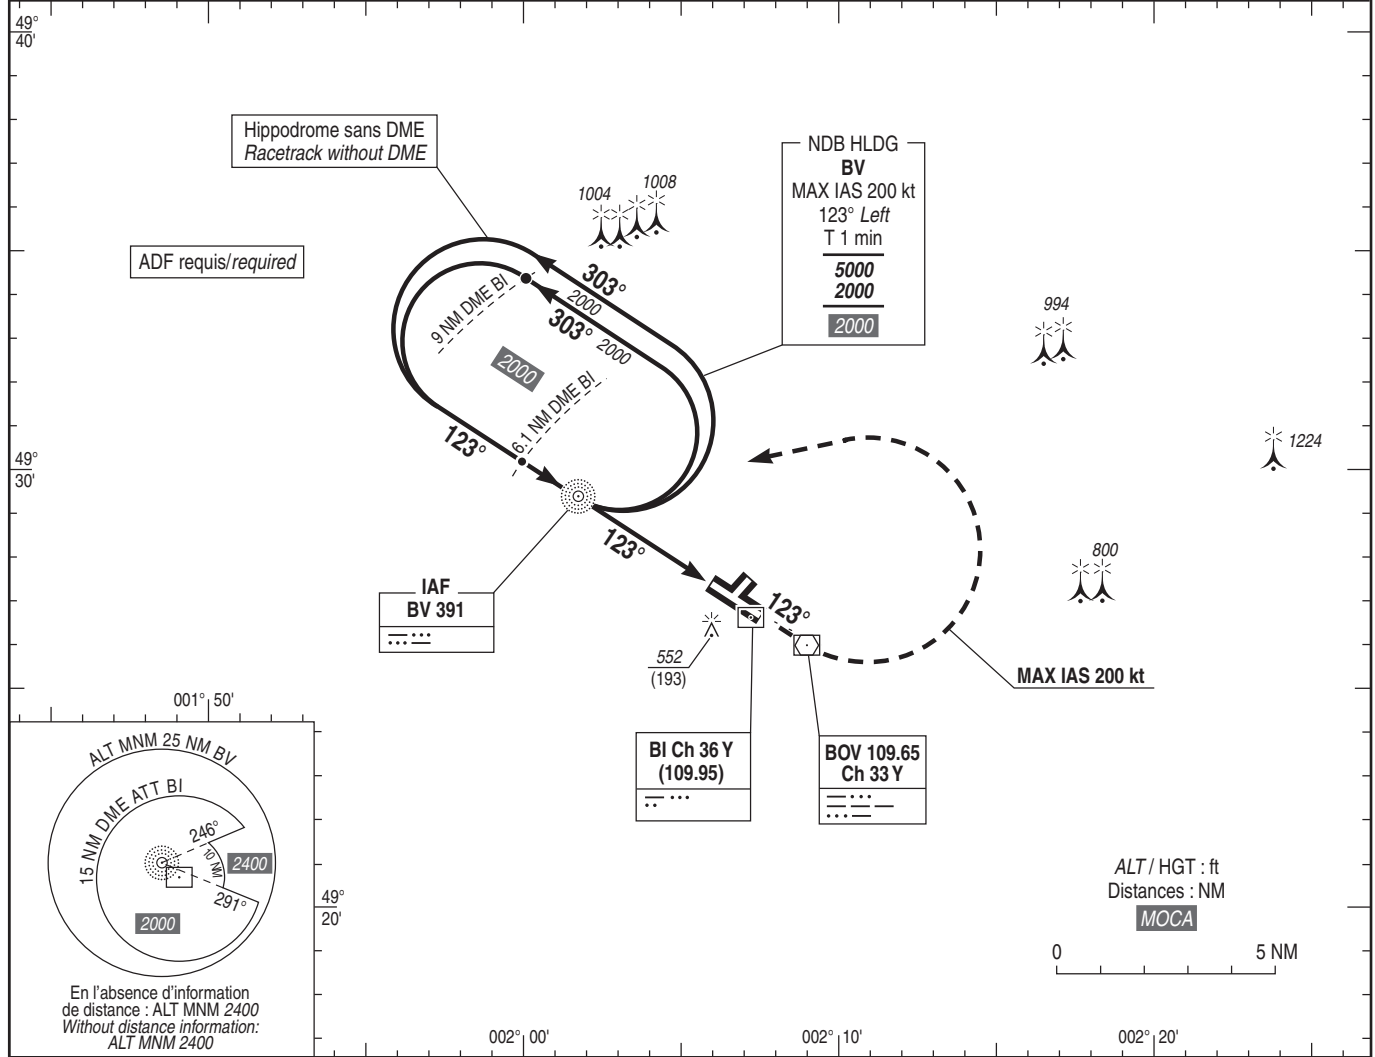

→ THR (NM)	5	3.5	0	0
→ DME BI (NM)	6.1	4.7	1.2	0

MNM AD : distances verticales en pieds, RVR et VIS en mètres / vertical distances in feet, RVR and VIS in metres. REF HGT : ALT AD

CAT	VOR X			MVL / Circling ⁽¹⁾		MVL / Circling ⁽¹⁾ absence ATS HJ seulement/only		DME BI		
	MDA (H)	RVR	OCH	MDA (H)	VIS	MDA (H)	VIS	NM	ALT	(HGT)
A				860 (500)	1500	1000 (640)	1500	5	1620	(1261)
B	760 (400)	1400	397	900 (540)	1600	1040 (680)	1600	4	1300	(941)
C				-	-	-	-	3	980	(621)
D				-	-	-	-			

Observations / Remarks : (1) MVL CAT C et D interdites / Circling CAT C and D prohibited.

NDB - DTHR	3.5 NM	70 kt 3 min 00	85 kt 2 min 28	100 kt 2 min 06	115 kt 1 min 50	130 kt 1 min 37	160 kt 1 min 19	185 kt 1 min 08
VSP (ft/min)		375	455	530	610	690	850	985