

**APPROCHE AUX INSTRUMENTS**

**BEAUVAIS TILLE**



Instrument approach

CAT A B C D

ALT AD : 359 (13 hPa), DTHR : 352

FNA VOR Z RWY 12

ATIS BEAUVAIS : 118.380 APP : BEAUVAIS Approche / Approach 123.985 TWR : BEAUVAIS Tour / Tower 121.400 Absence ATS : A/A FR seulement / only. Obtenir / Obtain QNH PARIS LE BOURGET sur / from ATIS LE BOURGET 120.000	VAR 1° E (20)
---	---------------------

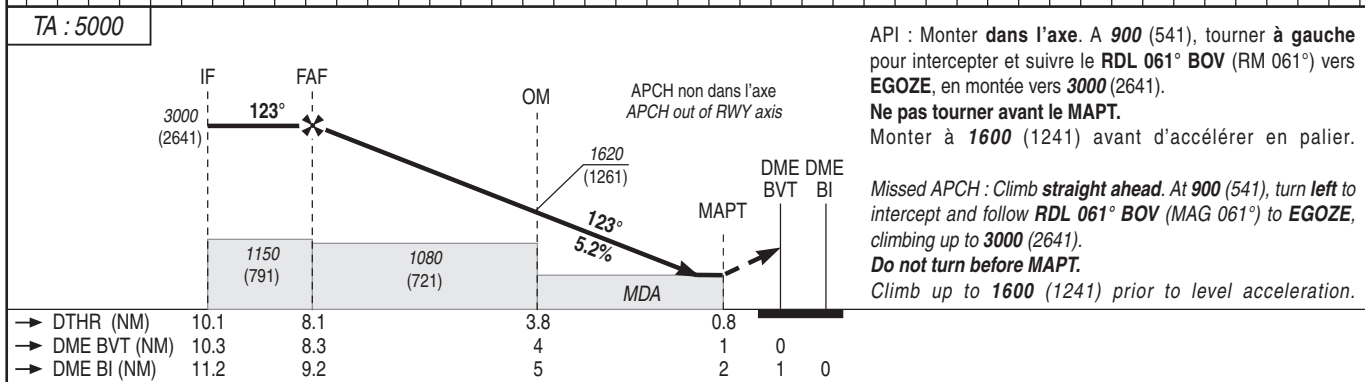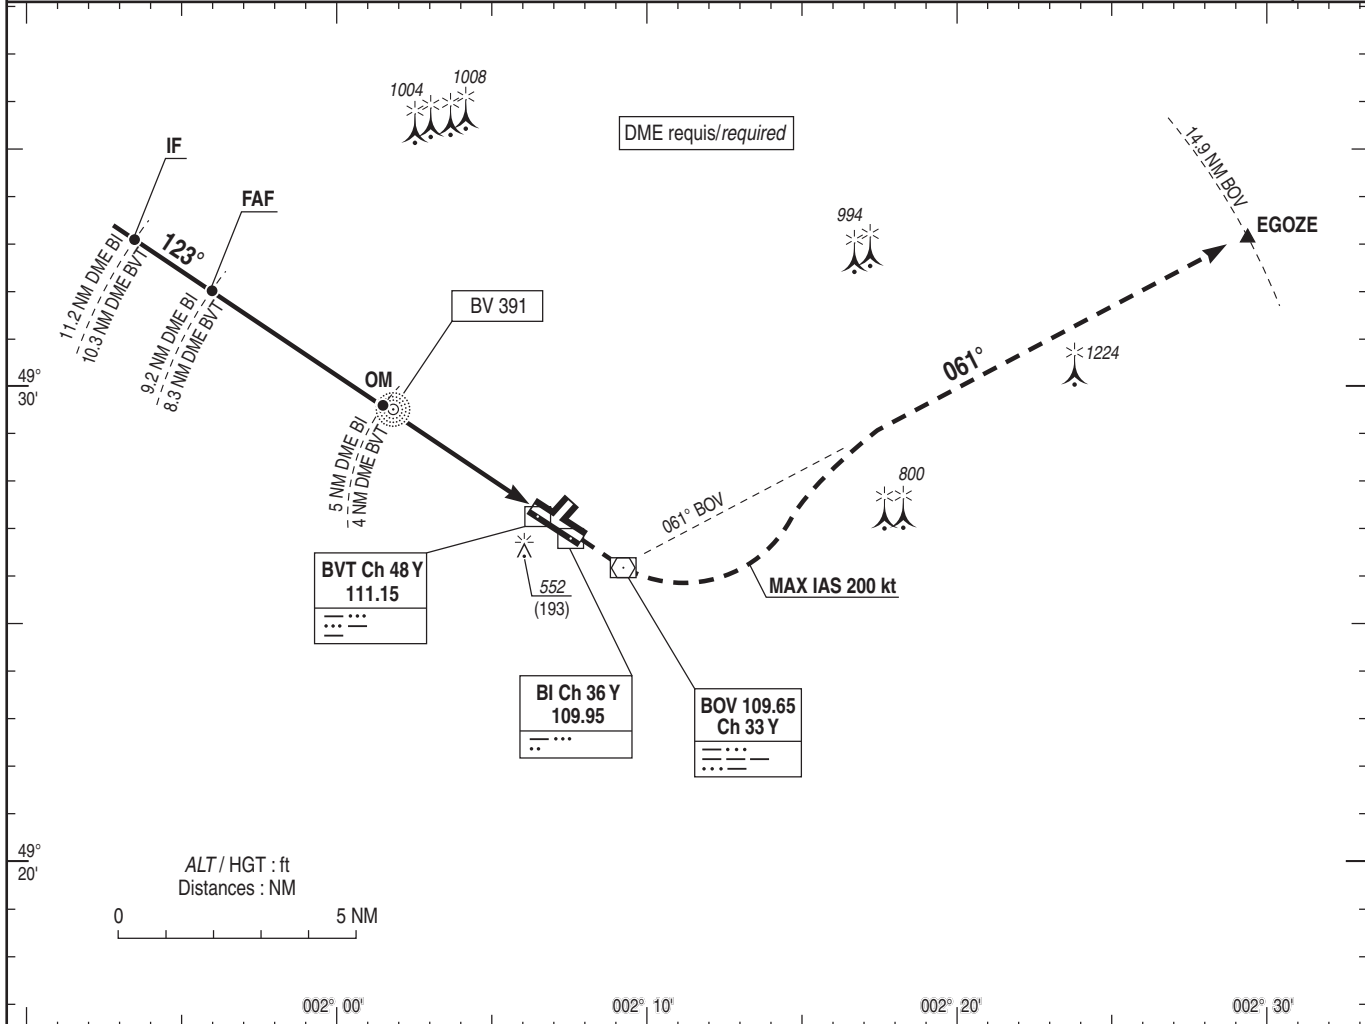

MNM AD : distances verticales en pieds, RVR et VIS en mètres / vertical distances in feet, RVR and VIS in metres. REF HGT : ALT AD

CAT	VOR Z			MVL / Circling <sup>(1)</sup>		MVL / Circling <sup>(1)</sup> Absence ATS HJ seulement/only		DME BVT								
	MDA (H)	RVR	OCH	MDA (H)	VIS	MDA (H)	VIS	NM	8	7	6	5	4	3	2	1
A				860 (500)	1500	1000 (640)	1500		2890	2580	2260	1940	1620	1300	980	670
B	760 (400)	1400	397	900 (540)	1600	1040 (680)	1600		(HGT) (2531)	(2221)	(1901)	(1581)	(1261)	(941)	(621)	(311)
C				-	-	-	-									
D				-	-	-	-									

Observations / Remarks : (1) MVL CAT C et D interdites / Circling CAT C and D prohibited.

FAF - DTHR	8.1 NM	70 kt	85 kt	100 kt	115 kt	130 kt	160 kt	185 kt
VSP (ft/min)		370	450	530	610	690	850	985