

APPROCHE AUX INSTRUMENTS

Instrument approach



CAT A B

ALT AD : 24 (1 hPa), DTHR : 18

KONE

RNP RWY 27

APP : NIL TWR : NIL AFIS : KONE Information 122.500 (FR) Absence ATS : A/A (122.500) FR seulement. Obtenir le QNH local sur STAP 122.500 (☎ 47 84 33) ou auprès de TONTOUTA Information 128.200 A/A (122.500) FR only. Obtain local QNH from STAP 122.500 (☎ 47 84 33) or TONTOUTA Information 128.200	RNP APCH GNSS requis GNSS required	VAR 12° E (20)
--	---	-----------------------------

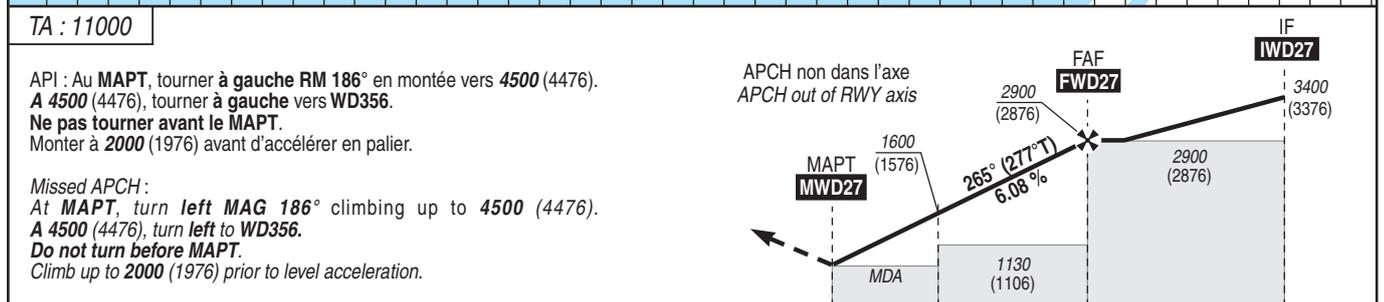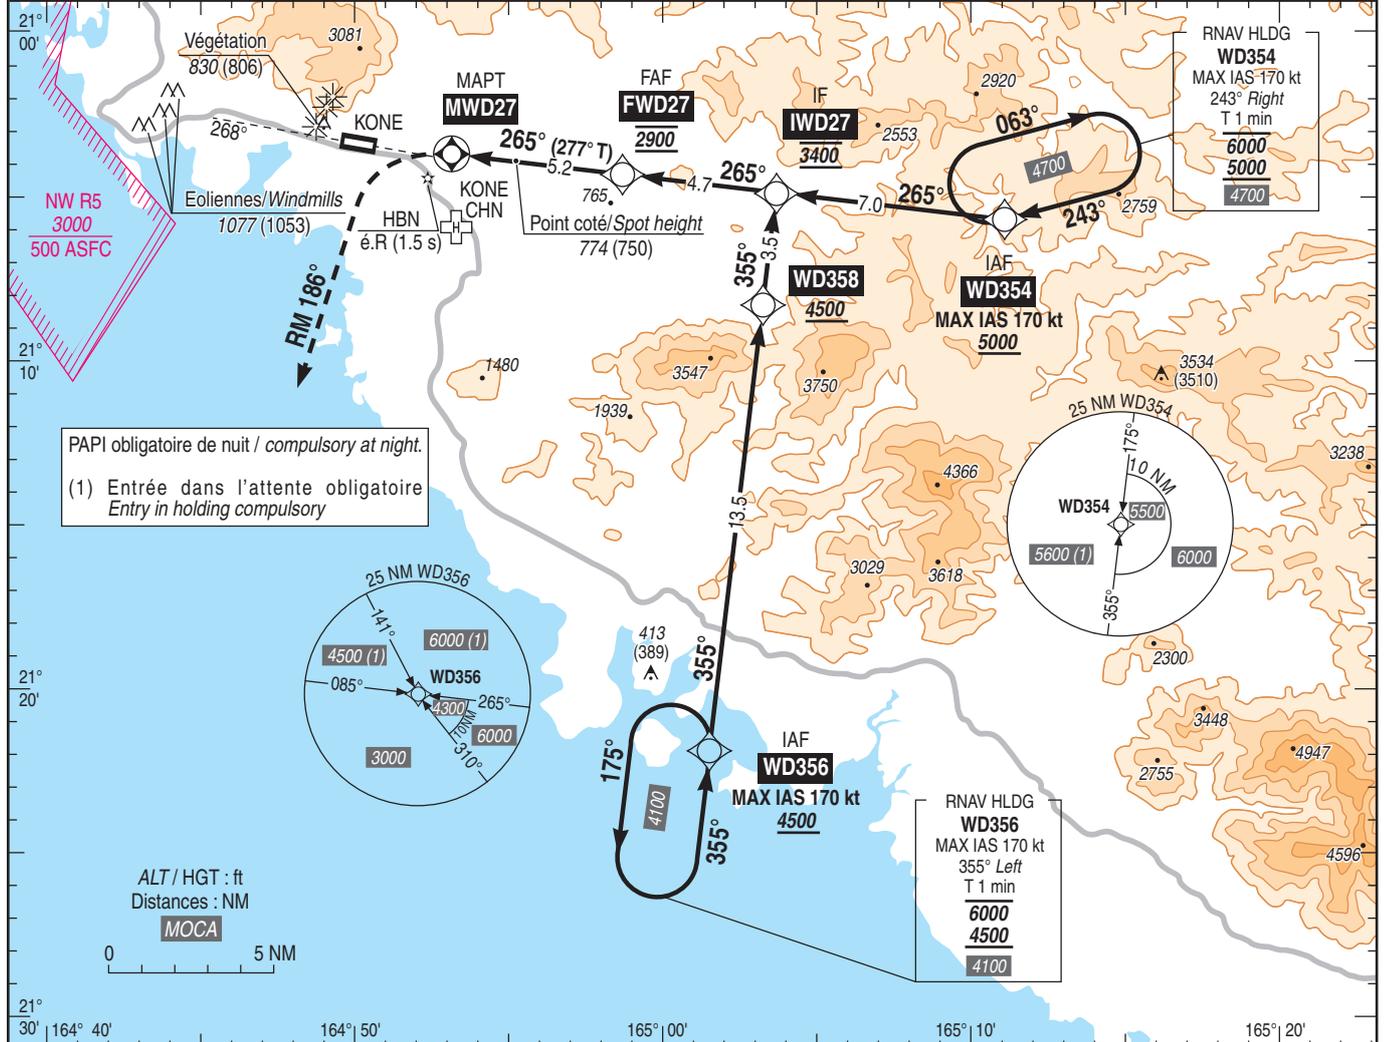

DTHR (NM) ←	0.0	2.4	4.1	7.6	12.3
MAPT (NM) ←	0.0	1.7	5.2	9.9	

MNM AD : distances verticales en pieds, RVR et VIS en mètres / vertical distances in feet, RVR and VIS in metres. REF HGT : ALT AD

CAT	LNAV			MVL / Circling (2)		DIST MWD27					
	MDA (H)	RVR	OCH	MDA (H)	VIS	NM	5	4	3	2	1
A	980 (950)	1500	946	2320 (2290)	4500	ALT	2810	2440	2070	1700	1330
B		1600				(HGT)	(2786)	(2416)	(2046)	(1676)	(1306)

Observations/Remarks : (2) MVL interdites au Nord de la piste / Circling prohibited North of RWY.

FAF - MAPT	5.2 NM	70 kt 4 min 29	80 kt 3 min 56	90 kt 3 min 30	100 kt 3 min 09	110 kt 2 min 51	120 kt 2 min 37	130 kt 2 min 25
VSP (ft/min)		430	490	550	620	680	740	800