

APPROCHE AUX INSTRUMENTS

LIFOU OUANAHAM

Instrument approach



CAT A B

ALT AD : 94 (4 hPa), THR : 90

NDB RWY 12

APP : TONTOUTA Approche / Approach 125.100 - 128.300 (s)
 TWR : NIL
 AFIS : LIFOU Information 118.500 (L) (FR) (1)
 Absence ATS :
 A/A (118.500) FR seulement. Obtenir le QNH local sur STAP 118.500 (☎ 45 11 06) ou le QNH de TONTOUTA auprès de TONTOUTA Information 125.100.
 A/A (118.500) FR only. Obtain local QNH from STAP 118.500 (☎ 45 11 06) or TONTOUTA QNH from TONTOUTA Information 125.100.

VAR
12° E
(2025)

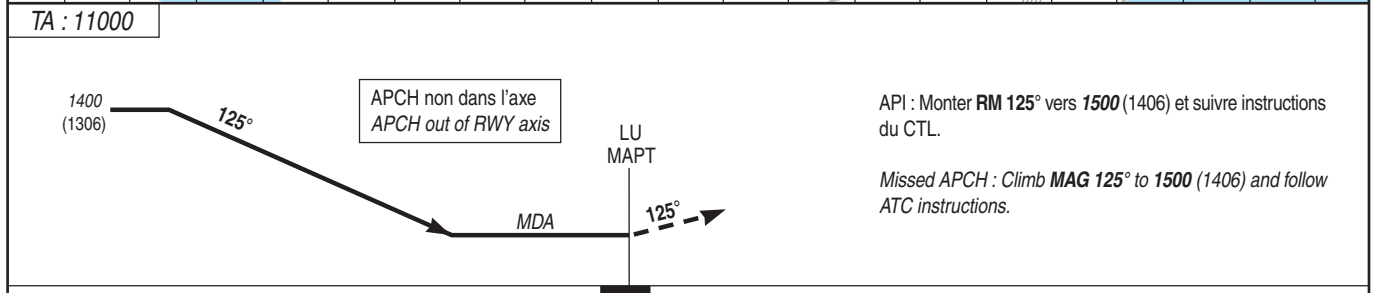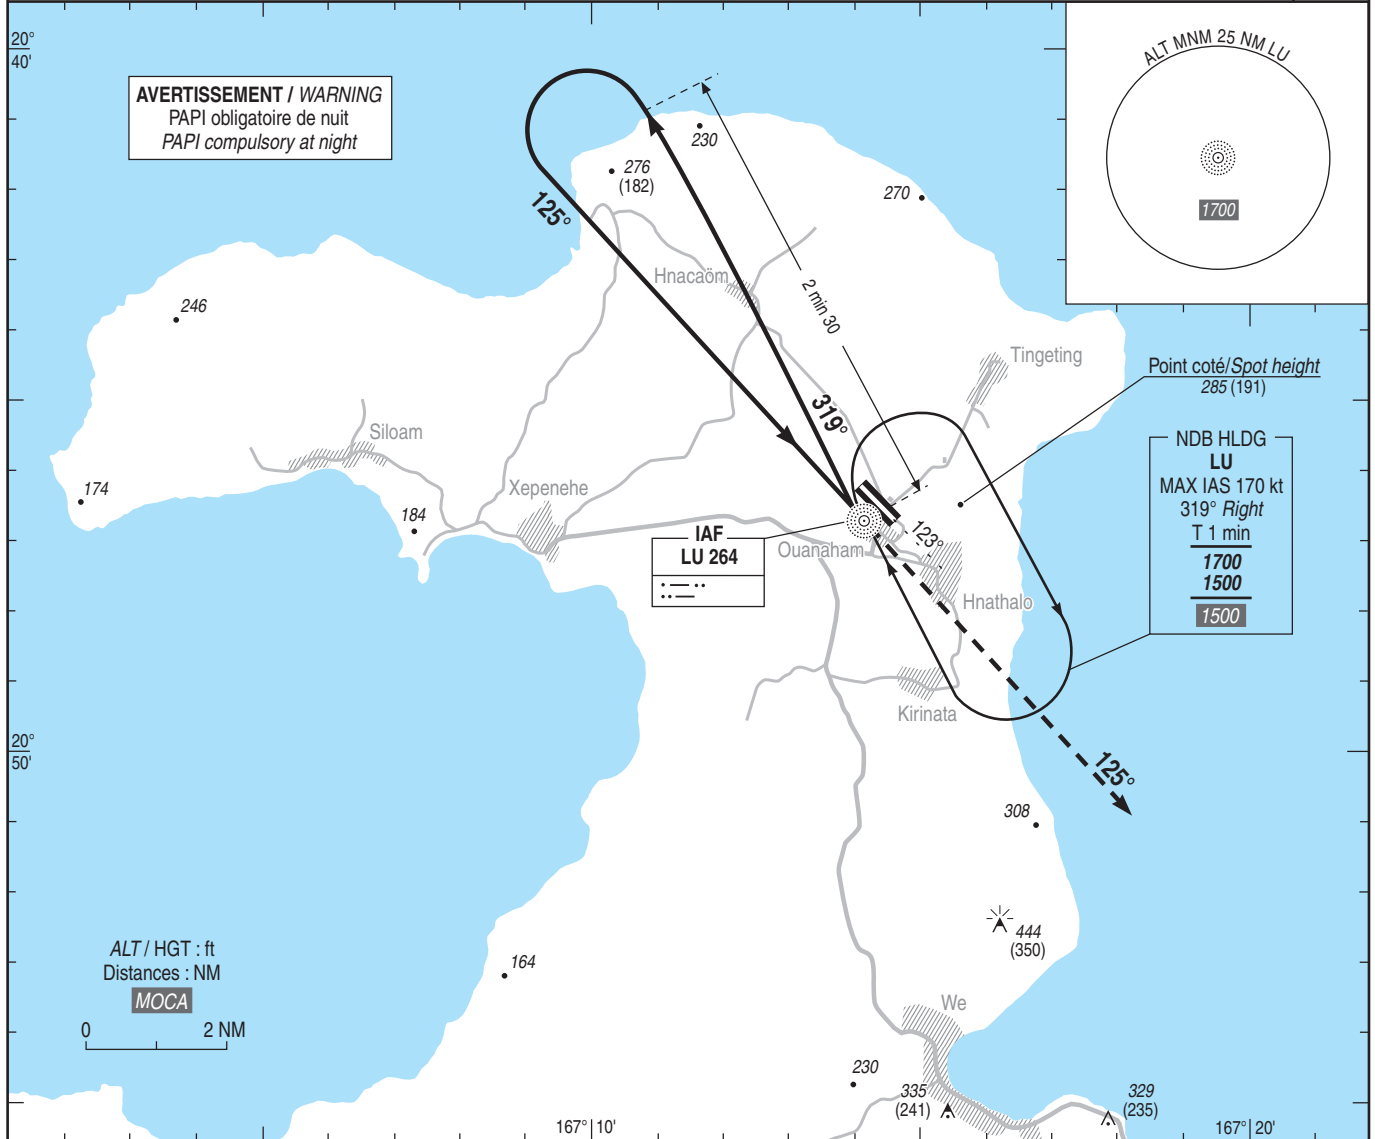

MNM AD : distances verticales en pieds, RVR et VIS en mètres / vertical distances in feet, RVR and VIS in metres. REF HGT : ALT AD

CAT	NDB			MVL / Circling		MVL / Circling Absence ATS, sans/without QNH local	
	MDA (H)	RVR	OCH	MDA (H)	VIS	MDA (H)	VIS
A	640 (540)	1500	532	720 (630)	1500	1160 (1070)	1500
B	640 (540)	1600		730 (640)	1600	1180 (1090)	1600

Observations / Remarks : (1) Possibilité langue anglaise / English language option : voir / see AD 2 NWWL.18